

Rockin' Rider®

2-in-1 pony OWNER'S MANUAL

 
⚠ WARNING

- PARENTS: MONITOR YOUR CHILD'S PLAY ACTIVITY TO ENSURE PROPER AND SAFE USE OF THIS PRODUCT.
- REMOVE ALL PACKAGING, CLIPS, STAPLES, TIES AND SIMILAR ATTACHMENTS BEFORE GIVING THIS TOY TO A CHILD, AS THESE ATTACHMENTS POSE A POTENTIAL CHOKING HAZARD AND ARE NOT PART OF THE TOY.
- ADULT ASSEMBLY IS REQUIRED.
- PARENTAL SUPERVISION IS REQUIRED.



- This product is designed for a child at least 15 months old and weight not exceeding 40 lbs (18.1 kgs).
- Allow only one child on the product at a time.
- Never allow the child to play with the product near roadways, streets, swimming pools, hills, sloped driveways, ramps, steep inclines, or stairs. Use only on a level surface.
- Always wear shoes while riding.
- Do not allow another child to push the product when a child is sitting on it.
- Do not allow the child to stand on the product.

PARTS

1) Horse Body

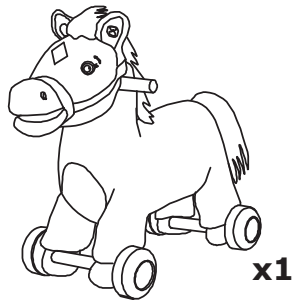


  2) Rocker Base

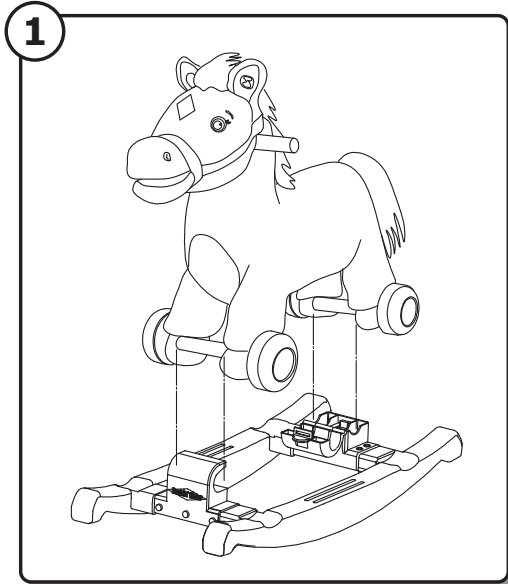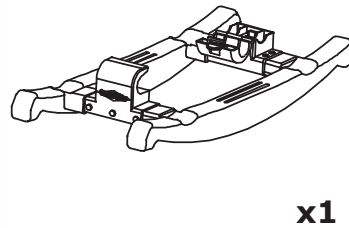

CONVERT TO ROCKING MODE:

 1. Pony & Rockin' Rider logo facing forward.
2. Push front axle in until it snaps
3. Close cover over rear axle and lock securely.

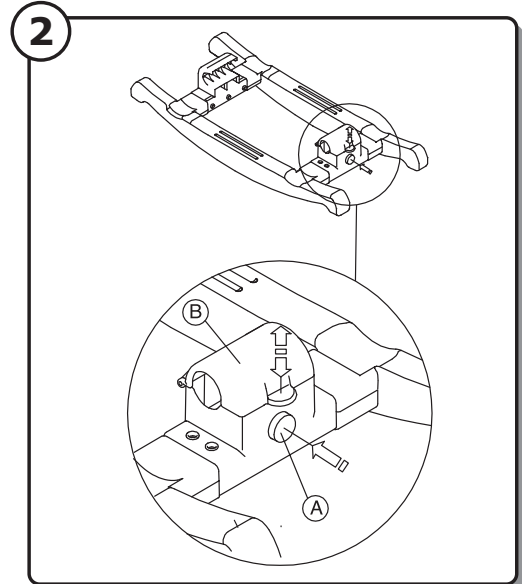

CONVERT TO ROLLING MODE:

1. Push button to unlock and lift cover.
2. Pull up rear legs.
3. Pull back on front legs.



ELECTRONIC FEATURES

Please note: For best performance of electronic features, we recommend replacing the batteries that came with this product with brand new alkaline batteries.

SOUND EFFECTS AND MOVING MOUTH

The sound effects and moving mouth features are activated by squeezing either of the horse's ears. If the sound becomes distorted or the mouth stops working please replace the batteries as outlined in the Battery Replacement section of this manual.

VOLUME CONTROL

You can adjust the sound effect volume by sliding the volume switch on the battery compartment to either low  or high . Please see the Battery Replacement section of this manual for the location of the battery compartment.

BATTERY REPLACEMENT

The battery compartment is located under a Velcro strip on the left side of the horse's mane. You will need a small Phillips screwdriver to open the compartment. When you are finished replacing the batteries, securely fasten battery cover and screw, stick the battery box back into the pouch, and re-seal the Velcro strip.

⚠ WARNING

- 1) Only an adult should replace batteries.
- 2) Remove exhausted batteries and dispose of properly.
- 3) This toy uses 3AA batteries.
- 4) Install batteries correctly observing the polarity (+,-) signs.
- 5) We recommend use of alkaline batteries for optimal performance of electronic features.
- 6) Do not mix old and new batteries.
- 7) Do not mix alkaline, standard (Carbon-Zinc), and rechargeable (Ni-Cad) batteries. Only batteries of the same or equivalent type as recommended are to be used.
- 8) Remove the batteries if the toy will not be in use for an extended period of time.

Care and Maintenance

- Check all nuts and screws prior to use and periodically thereafter. Tighten or replace as necessary.
- Product may be cleaned with a mild household detergent and warm water.
- Do not place near stairways, wall heaters, fireplace or any source of extreme heat.
- Check all parts for cracks, cuts and/or excessive wear. Replace as necessary.
- Any contact with moisture or liquid may damage the electronics.
- Occasionally check to see that all nuts and screws are tight and secure.
- If the sound is not operating correctly, replace the batteries.
- Make sure all hardware is tightened before the child rides the toy.

This product conforms to ASTM-F963. Standard Consumer Safety Specifications on Toy Safety. This instruction manual contains assembly instructions, safety and maintenance tips.

PLEASE KEEP THIS MANUAL FOR FUTURE REFERENCE

Tek Nek Toys International, Inc.
1904 Industrial Blvd., Ste. 100-101
Colleyville, TX 76034 USA
www.myrockinrider.com

Made in China.

Pat. No. US 6,524,156/6,780,076/8,915,791

⚠ WARNING :

ADULT SUPERVISION REQUIRED.

THIS PACKAGE CONTAINS SMALL PARTS WHICH HAVE HAZARDOUS SHARP POINTS IN THE UNASSEMBLED STATE. FOR ADULT ASSEMBLY ONLY. CARE SHOULD BE TAKEN IN THE UNPACKING AND ASSEMBLY OF THIS TOY.

⚠ WARNING

WHEN CHANGING THE BATTERIES, THE SCREW THAT SECURES THE BATTERY COMPARTMENT SHOULD BE KEPT AWAY FROM CHILDREN AS IT POSES A POTENTIAL CHOKING OR INHALATION HAZARD.

⚠ WARNING :

ANY RUBBER BANDS, PLASTIC SECURING BANDS, WIRE TIES AND TAGS, USED IN THIS PACKAGING ARE NOT PART OF THIS PRODUCT AND SHOULD BE REMOVED FOR YOUR CHILD'S SAFETY. ANY CONTACT WITH MOISTURE OR LIQUID WILL DAMAGE THE ELECTRONICS. COLORS AND DECORATIONS MAY VARY.